



Equipment Specification

CITROEN

CITROEN 23 h.p. 1946-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-53	36033D	LAMPS—continued			Trafficators	1949-52	*54017B
Coil, ignition	1949-53	*45020A/B	Side	1949	52164A	" Later	1952-55	54044A/D
"	1954-55	*45012B	"	1950-52	52134A/B	Warning lights		
Control arm	1949-50	31129A	"	1953-55	52030A	Flasher	1951-53	*38069A
Control box	1946-55	37057E	" (U.S.A.)	1949-50	52134A/B	Main beam	1949-53	*38069A
Distributor	1946-55	40173A/E	"	1953	*52162B/D	Windshield wipers		
Flasher unit	1953	*35003A	Stop tail and number plate	1949-50	*53029A	Motor	1949-50	*75055K
Flasher relay	1953	33117A	"	1951-52	*53063B	"	1951	*75055L
Generator	1946-55	22430E	Tail and flasher indicator (U.S.A.)	1953	53200A	" Later	1951-55	75152A
Horn			Reflex reflector (U.S.A.)	1953	*57035D	Wheelbox		
Low note	1949-51	*69019A	Starting motor	1949-55	25513A/D	With switch	1949-50	72608A/D
"	1955	69046A				"	1951-55	72567A/H
High note	1949-51	*69020A				Less switch	1949-50	72607A/B
"	1955	69047A				"	1951-55	72568A/E
LAMPS			SWITCHES			Crosshead and rack assy.		
Head, Home			Ignition	1951-55	31287A	Cut to 34 $\frac{1}{2}$ "	1949-55	736177
R.H.D., dip left (L.H.)	1949-50	*50861A	Ignition and lighting	1949-50	*34025B	Outer casing		
" non-dip (R.H.)	1949-50	*50862A	Solenoid, starting motor	1949-55	*76411D/E	Motor to wheelbox	1949-55	739870
" dip left			Solenoid operating	1949-54	*317063	Wheelbox to wheelbox	1949-52	*739943
(L.H. and R.H.)	1951-52	*50718F	Stop lamp	1955	31363A	"	1953-55	*739979
"	1953-55	51473A	Spring	1949-53	31281B	3", offside wheelbox	1949-55	740031
Head, Export			Trafficator	1951	*315714	Grommet, wheelbox	1949-53	733874
R.H.D., dip left	1951-52	*50718F	" Later	1951-52	31190	"	1954-55	733695
L.H.D., dip right	1951-52	*50775E	Lever	1953-55	31250F	Arm	1949-54	*735076
Number plate illumination and boot	1955	53308A		1953-55	311156	Blade	1955	*735098
							1949-55	727707

CITROEN 15 h.p. 1946-55

Ammeter	1946-54	36033D	LAMPS, Head, Home—			Trafficators	1946-52	*54017B
Coil, ignition	1946-54	*45020A/B	continued			"	1953-55	54044A/D
"	1955	*45012B	R.H.D., dip left			Warning lights		
Control arm	1946	*310518	(L.H. and R.H.)	1951-52	*50718F	Flasher	1951-54	*38069A
" Later	1946	31110A	dito	1953-55	51473A	Main beam	1949-54	*38069A
"	1947-50	31129A	Head, Export			Windshield wipers		
Control box	1946-48	*37031A/B	R.H.D., dip left	1950-52	*50718F	Motor	1946-48	*75066A
"	1949-50	37057E	L.H.D., dip right	1950-52	*50775E	"	1949-50	*75055K
"	1951-52	37065E	Number plate illumination and boot	1954-55	53308A	"	1951	*75055L
" Later	1952-55	*37138A/D	Side	1946-55	52030A	"	1952-55	75152A
Distributor	1946-49	40100E	" (U.S.A.)	1953-55	*52162B/D	Clutch housing	1946-48	735691
" Later	1949	*40219A/B	Stop tail and number plate	1946	*53028B	Wheelbox		
"	1950	*40219D	"	1947-52	*53063B	With switch	1949-50	72608A/D
" Later	1950	*40219E/F	Stop tail (Export)	1949-50	*53151B/D	"	1951-55	72567A/H
" Later	1951-52	40236B/D	Tail and flasher (U.S.A.)	1953-54	53200A	Less switch	1949-50	72607A/B
Flasher unit	1953-54	*35003A	Reflex reflector (U.S.A.)	1953-54	*57035D	"	1951-55	72568A/E
Flasher relay	1953-54	33117A	Starting motor	1946	*255273	Bracket, shaft, short	1946-48	737243
Fuse box	1952-55	033239	" Later	1946-48	25502A	Bracket coupling	1946-48	729036/S
Generator	1946	*228199	"	1949-55	25531A/D	Link, primary	1946-48	734756
"	1947-50	22416B				" secondary	1946-48	737281
"	1951-52	*22250E/F	SWITCHES			Crosshead and rack assy.		
" Later	1952-55	22258D	Ignition	1951-55	31287A	Cut to 34 $\frac{1}{2}$ "	1949-52	736177
Horn			Ignition and lighting	1946-50	*34025B	Crosshead and rack assy.	1953-55	738764
Low note	1946-48	*69021A	Solenoid, starting motor	1946-48	76022B	Outer casing		
"	1949-50	*69011F	Solenoid operating	1949-55	*76411D/E	Motor to wheelbox	1949-55	739870
"	1955	69046A	Starting motor	1946	*764150	Wheelbox to wheelbox	1949-52	*739943
High note	1946-48	*69022A	Stop lamp	1946-53	31281B	"	1953-55	739937
"	1949-50	*69012F	Spring	1955	*315714	3", offside wheelbox	1949-55	740031
"	1955	69047A	Stop lamp	1954-55	31440A	Grommet		
LAMPS			Trafficator	1951	31190A	Housing or wheelbox	1946-52	733874
Head, Home			" Later	1951-52	031046	Wheelbox	1953-55	733695
R.H.D., dip left (L.H.)	1946	*50253B	Knob	1953-55	311156	Arm	1946-54	*735076
" non-dip (R.H.)	1946	*50254B				"	1955	*735098
" dip left (L.H.)	1947-50	*50716D				Blade	1946-55	727707
" non-dip (R.H.)	1947-50	*50717D						

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section.
R.H.D. .. Right hand drive

L.H. .. Left hand R.H. .. Right hand

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)